



7.5' DEWDROP SPRUCE

Model #: C23D726R

APPROXIMATE SETUP TIME



30 minutes




TREE ASSEMBLY INSTRUCTION

Fig. A - Tree Stand Assembly



- Step 1. Choose a location near a wall outlet.
 Step 2. Open the stand to a 90 degree angle until the hole lines up with the hole on the tube.
 Step 3. Screw an eye bolt into the hole.

Fig. B - Tree and Light Assembly

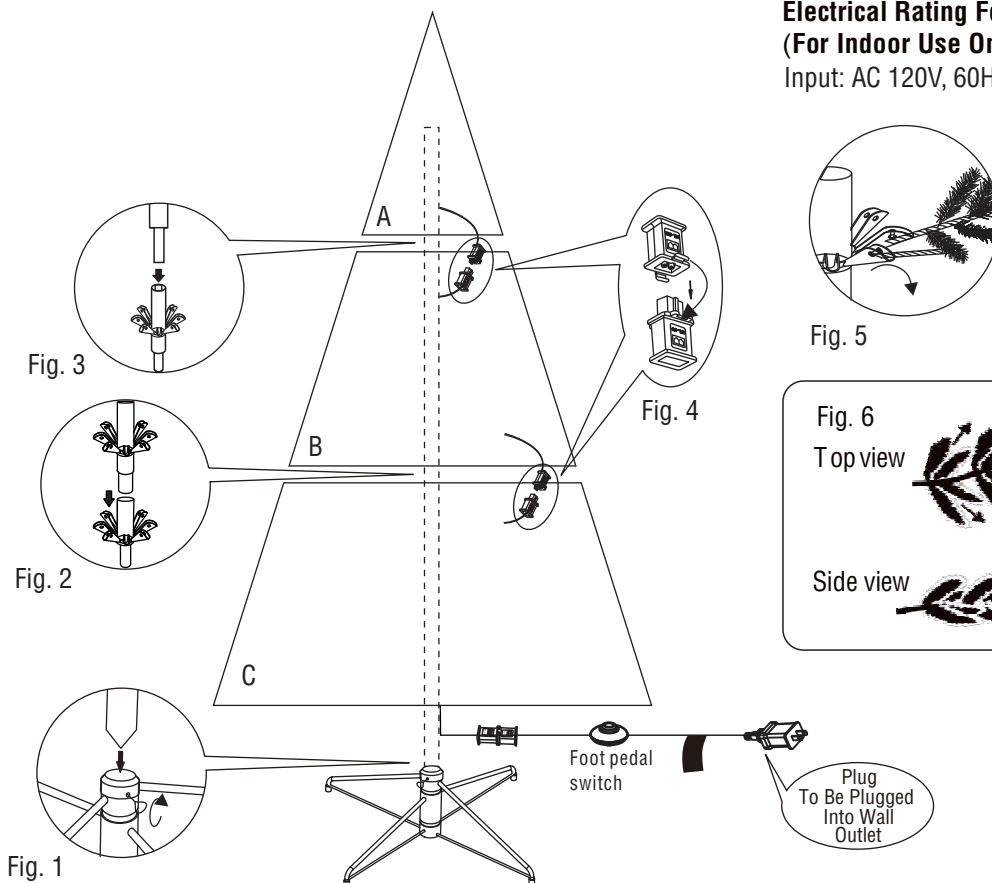

Electrical Rating For The Tree (For Indoor Use Only)

Input: AC 120V, 60Hz, 0.16A

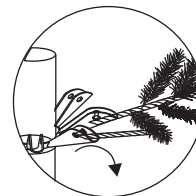


Fig. 5

Fig. 6

Top view



Side view



BEFORE YOU BEGIN

Congratulations on purchasing your new tree from Willis! Carefully follow the instructions below on how to quickly and easily set up your new tree.

1. Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.
2. Before you start to assemble your tree, choose an appropriate location near a wall outlet.
3. Assemble the tree stand and place on a level surface.

INSTRUCTIONS

Please remove protective covers from the base of the pole for each tree section before assembling.

- Step 1. Carefully insert bottom section (C) of tree into tree stand and tighten the screw. (See Fig. 1)
- Step 2. Insert the middle section (B) of the tree into the bottom section (C). (See Fig. 2)
- Step 3. Insert the top section (A) into the middle section (B). (See Fig. 3)
- Step 4. Insert the plug from the base of section (A) into the connector from the top of section (B), insert the plug from the base of section (B) into the connector from the top of section (C), and then clip the connectors tightly as shown in the magnified drawing in Fig. 4.
- Step 5. Allow branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges. (See Fig. 5)
- Step 6. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch. (See Fig. 6)
- Step 7. Plug the well-connected power cord from the tree section (C) into a proper outlet.
- Step 8. After shaping the entire tree following the previous step, slightly upsweep all branch tips for a uniform look. Shift branches to fill any gaps. Your Christmas tree is now complete and ready to be decorated.
- Step 9. Please note this tree comes with a foot pedal switch for changing functions. Press the foot pedal switch to select from the 4 lighting functions: Twinkling, Steady on, Flashing and Slow fade. Lighting functions are saved even when the tree is unplugged.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed / practiced including the following:

a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles, or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product—not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) Do not use an extension cord.
- n) Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
- o) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- p) Do not install or use within 10' (3 m) of a pool.
- q) Do not use in a bathroom.

r) **WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

s) **WARNING:** Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

- t) **WARNING:** Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).
- u) Read and follow all instructions that are on the product or provided with the product.
- v) **SAVE THESE INSTRUCTIONS** - This manual contains important safety and operating instructions for power units.

CAUTION! - ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.

Use and Care Instructions

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.


CAUTION

- The product consists of non-replaceable LED lamps. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify wiring or product.
- To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal; and b) Do not mount or support strings in a manner that can cut or damage wire insulation.
- This product can only be used with the original adapter, not other brands of adapter.

Care and Cleaning

- Remove all ornaments and decorations.
- Unplug the cord from the wall outlet and then unplug each section of the tree.
- Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Repeat this step for the center and bottom tree sections.
- Carefully place all tree sections into a shipping box and tape it shut.
- Store your tree in a cool, dry place away from sunlight.

TROUBLESHOOTING

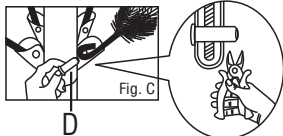PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The product does not light.	<ol style="list-style-type: none"> All connectors of tree sections aren't connected well. Power cord plug isn't securely inserted into a working electrical outlet. 	Ensure that all connectors of tree sections are connected into each other well. Make sure power cord plug is securely inserted into a working electrical outlet.
Loose branches	A branch of the tree falls off.	<ol style="list-style-type: none"> Place the branch into the slot of the bracket. Insert a spare rivet (D) through the hole and use diagonal pliers (not included) to crimp the rivet (D). (See Fig. C) 

TIPS & TRICKS



If The Tree Does Not Light

1. Ensure that all connectors of tree sections are plugged into each other well and that the tree is plugged into the wall outlet.

⚠ WARNING

1. To reduce the risk of fire and electric shock, use only with the power-supply cord provided or with a cord set intended for indoor use.
2. Do not use a cracked, frayed, or damaged cord. Inspect the cord periodically.
3. Do not abuse cord – Do not carry product by the cord or yank or pull it to disconnect from the outlet.
4. Disconnect the product from the outlet when not in use.
5. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children and pets can reach it.
6. Use of ladder to set up tall trees:
Ensure the ladder is securely fixed and is not slippery. Be cautious when climbing up and down the ladder.



Be cautious when using ladder to set up tall trees

SUPPORT CONTACT

SPARE PARTS

If extra parts are needed, please contact our customer service center.

CUSTOMER SERVICE FOR CHRISTMAS TREES

For any questions, assistance, or missing parts, Do Not Return To Place Of Purchase. Please contact us at 1 (866) 210-5958 or visit our website at www.williscorporation.com. One of our customer service representatives will be happy to assist you.

Tree ID#: _____

Customer Name: _____

Tree UPC: _____

Address (No P.O. Boxes): _____

Store Purchased: _____

City & State: _____

Specify Problem: _____

Zip Code: _____

Day Phone: _____

Date Purchased: _____

TREE ID# IS LOCATED ON END PANEL OF BOX. TREE ID# IS REQUIRED WHEN REQUESTING REPLACEMENT PARTS.

MODEL #: CLT-036 TS-8W29V

CAN ICES-005(B) / NMB-005(B)

Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient or relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.

LIMITED WARRANTY

Willis Electric Co., LTD provides a Limited Warranty against defects in material and workmanship.

This Limited Warranty only applies to the original purchaser, and only applies with proof of purchase. Should the purchaser or others modify or repair the product themselves or by unauthorized persons; use for commercial purposes; use the product in contravention of the instructions with regards to set-up and use; use improper voltage or accessories; abuse the product in any way; misuse through accident or negligence, this Warranty will not apply. This Limited Warranty does not cover consequential damages, including normal wear-and-tear, nor acts of God or events outside the control of Willis.

Willis is pleased to offer warranty for the repair or replacement of products for three (3) years for Christmas trees against manufacturer defects on parts from the date of purchase. Please keep your original store sales receipt, as this proof of purchase will be required and must accompany warranty claims to Willis or its designated agents.

IN NO EVENT SHALL Willis, ITS AUTHORIZED AGENTS, RELATED ENTITIES, OR EMPLOYEES BE LIABLE TO THE BUYER OR ANY OTHER PARTY FOR DIRECT OR CONSEQUENTIAL DAMAGES, including, but not limited to, injury, loss of income, and property damage. Some jurisdictions do not allow the exclusion or limitation of certain damages, so the above limitation or exclusion may not apply to you.

This Limited Warranty is not extended to close-outs, factory seconds, donated items, or resold products (i.e. garage sales, online auctions, or online retailers not purchasing the products directly from a Willis company). Any issues with items purchased from these types of vendors/sellers will need to be addressed directly with them. Items purchased from seasonal stores will be treated with an "All Sales Final" Policy.

RETAIN THIS CERTIFICATE FOR YOUR RECORDS

For answers to frequently asked questions,
Please visit www.williscorporation.com
Customer Service Hotline: +1 (866) 210-5958

TX USA Corporation
1919 Akron Peninsula Road,
Akron, Ohio 44313
+1(866)210-5958